


You will need:

- Drill with correct bit
- Crosshead screwdriver
- Metal tape measure
- Pencil


Brackets




Screws & Wall Plugs

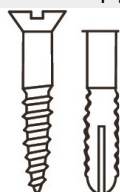

Your Roller

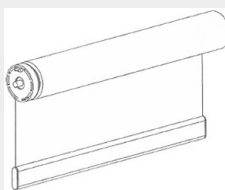

Safety Device/s

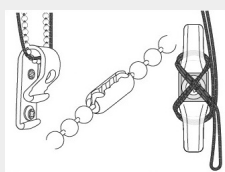

Your brackets are packed separately in the plastic wrap. Please ensure you've located them before disposing of the packaging.


Please read the following instructions carefully before you start fitting your blind.

Fitting, Operating & Safety Instructions.

1.

Outside Recess If fitting the blind outside the window, position the middle of the blind by the centre of the window to indicate the bracket locations.


Inside Recess For **Face Fixing**, fit brackets to the window frame. For **Top Fixing**, fix to the lintel if the window frame is uPVC, or if there are any obstructions (such as window handles).

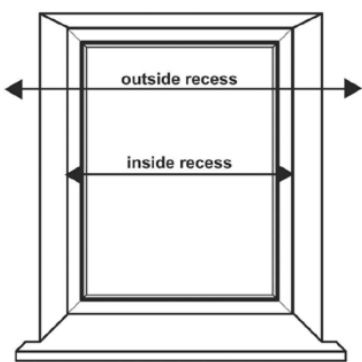


2.

Hold each bracket into place and mark the positions of the holes. Fit each bracket using two screws.

Top Fixing

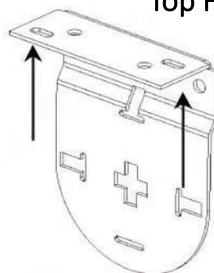


Face Fixing

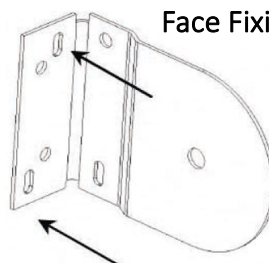


3.


Holding the fully-wound blind insert the idle pin end into the bracket as shown.

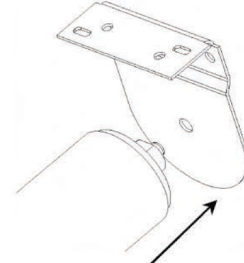

With the idle pin end in place, insert the control end into the opposite bracket. Ensure that the blind has clicked into place using the centre lug.

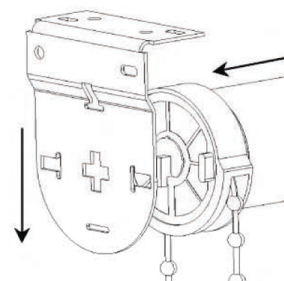

4.

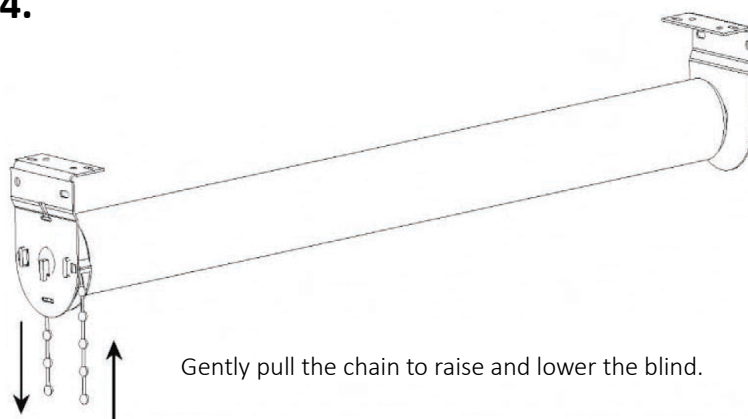

Gently pull the chain to raise and lower the blind.

5.

There is an integrated child safety device supplied with your new roller blind. This is in the form of a 'break-away' chain connector. It has been designed and rigorously tested to break free under 6kg of pressure.



Cleverly, it shall always remain attached to one loose end of the control chain. This avoids having to hunt around for it before once more re-connecting it.

This safety device has been fitted in-line with child safety legislation.

The...

"distance from floor to bottom of cord shall be at least 0.6m"

Move beds, cots and furniture away from the window. Please see overleaf for further safety information.



Need some help fitting your blind?


0191 499 0099

Give us a call,
8am - 5pm Monday - Friday
8am - 4pm Saturday

PLEASE KEEP BABY'S COT OR CHILD'S BED AWAY FROM WINDOWS AND ENSURE THAT ALL BLIND & CURTAIN CORDS ARE KEPT OUT OF REACH.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

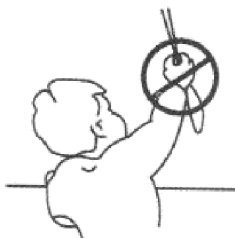

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

CHILD SAFETY

Child Safety Devices are fitted to this blind or are supplied as non-integral components. This is required to comply with BS EN 13120.

Please ensure your blind installer explains the requirements to your satisfaction and is able to install all non-integral safety items or if you are fitting this blind yourself, that you understand and are able to do so.


Information about blinds and Child Safety can be found at www.bbsa.org.uk & at www.makeitsafe.org.uk



**make it
safe**

Children can strangle if this safety device is not installed. Always use this device to keep cords or chains out of reach of children.

This label accompanies a non-integral safety device (cleat) designed to wrap all excess cord around away from a child's reach at a height of 1.5m (approx. 60") from floor level.

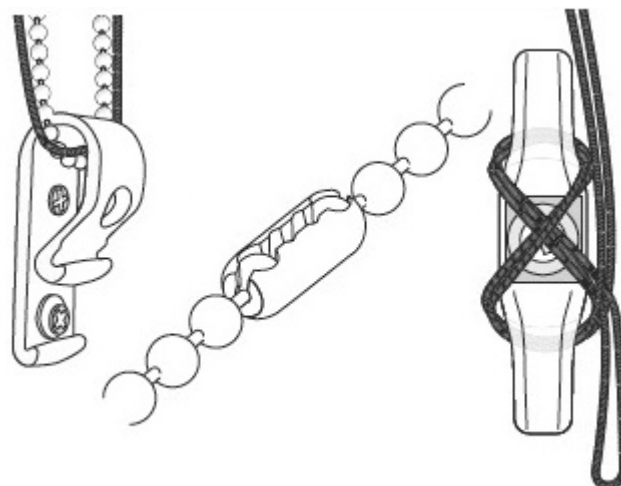

In the interest of safety, please keep all pull cords and chains out of the reach of children. Install safety devices such as cleats and cord tidies, to limit access to cords. Hanging cords can be a potential risk to children, so the greatest care needs to be taken at all times.

Do not tie loose cords and chains together.

Check the condition of all safety devices if not used regularly and replace if the device is faulty.



A1blinds
BLIND MANUFACTURERS

Tel: 0191 499 0099
www.a1blindsuk.co.uk